


EQUIPMENT

- 1 length ¾" PVC pipe
- 1 T-joint
- 4 end caps
- 1 can PVC Cement (don't glue Gizmo until we check size)
- 1 can PVC Cleaner (optional to take off writing on pipe)
- 1 hack saw or PVC cutter

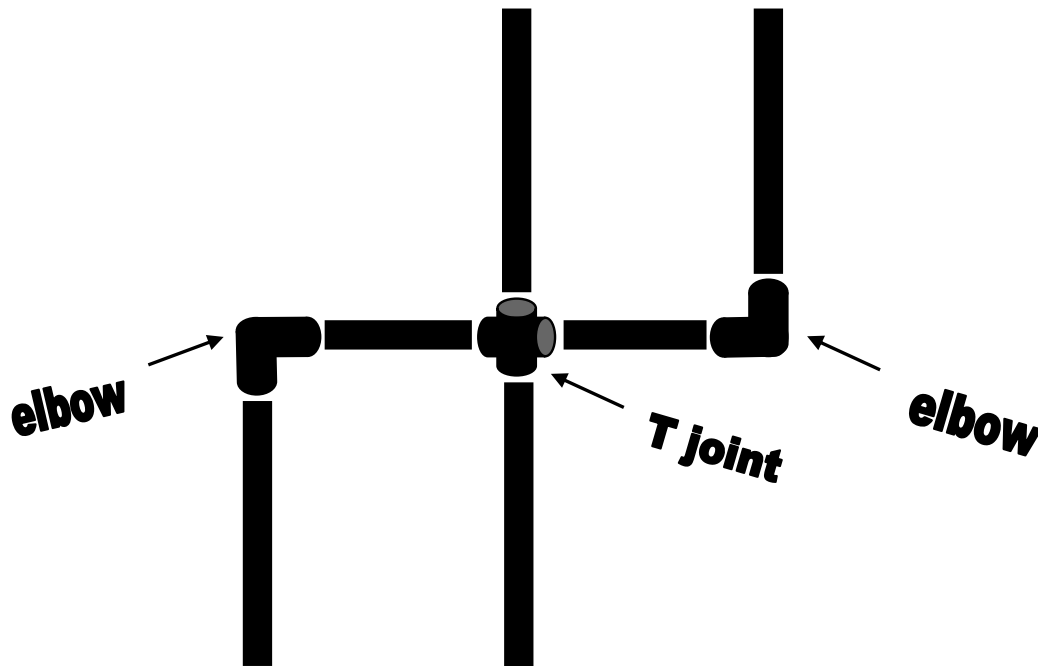

(Example is not to scale.)

Put the dog in a nice tight sit. Measure how wide its fanny is. You'll need help because the dog will move when you try to measure. Guess it tickles. Try sitting them on a yardstick. Subtract 1" from that measurement. Cut two lengths of pipe. These are the short arms. Put them in the T-joint and attach elbows. Cut long pieces from remaining pipe. Experiment and adjust.